

TERRAIN TAMER



4WD PRODUCTS

4WD Lift Jack

www.Pro4wd.cz

> Specifications

- AS/NZS2693:2003 approved
- 1,050 kg lift capacity
- 45 Inch lift
- Jack up or down
- Can use for winching
- Wide range of uses including 4WDing, on the farm & in the workshop

> Special Instructions

- Keep jack clean and oiled. Front and back of rail must be kept rust free
- Place the jack's base plate on a firm level surface with the jack pointing straight up
- Lift the silver lever on the lifting mechanism until it locks in the "UP" position
- Raise the lifting mechanism until the nose is completely and securely under the load
- The load will raise on each down stroke of the handle
- When not in operation, handle should be secured in the "UP" position, parallel to the bar
- With the handle in the upright position, move the silver lever on the lifting mechanism to the "DOWN" position
- With both hands carefully pump the handle up and down to lower the load
- the load will lower on each up stroke of the handle

N.B. Caution should be used when lowering, as once there is no load on the nose of the lifting mechanism, it will slide down to the base



PART NUMBER
THLJ

DESCRIPTION
HIGH LIFT JACK - 1050kg, 48 INCH LIFT



Tips & Techniques DVD included

To view a demonstration of this product visit our website terraintamer.com